

Pacific

addendum

The panels will go on the base rail in the same fashion as shown in the *Panel-Built Installation Instructions* so please read those instructions first. When you are ready to place the panels on the base rail refer to this addendum for proper sequence.

NOTE: The Pacific Sauna does not have corner posts, fasten them to one another as shown on page #4 of the *Panel-Built Installation Instructions*. Follow the *Exterior Installation* section.

Wall Panel Sequence

1. Place the right three panels (1, 2, and 3) on the base rail in that order.
2. Place the front panels (8 and 9) on the base rail.
3. Place the back panels (4 and 5) on the base rail.
4. Place the left wall panels (6 and 7) on the base rail in that order.
5. Make sure they are fastened to one another properly as shown on page #4 of the *Panel-Built Installation Instructions*.


Top Plate Installation

6. See page #7 of the *Panel-Built Installation Instructions* and use the *Installation Alternative* to install the top plate.
NOTE: You will have 1 curved section of the top plate to go with the curved wall panel.

Ceiling Panel Sequence

(See pages 7 and 8 of the *Panel-Built Installation Instructions*)

7. Place the left-side (as viewed from the front of sauna) ceiling panel into position.
NOTE: Make sure the tongue and groove is towards the interior of the sauna room and the plywood sides of the ceiling panels are facing up.
8. Place the center ceiling panel into position.
9. Place the right-side ceiling panel into position.

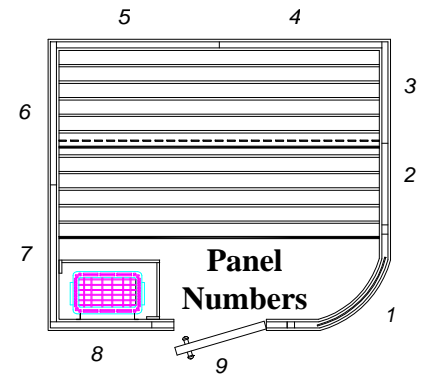

placing panel 1 on base rail



panel 1 positioned on base rail



inserting top plate



placing ceiling panel into position

Interior Ceiling Trim

10. Using the provided finishing nails, tack the molding into place along the straight walls. See page 8 of the *Panel-Built Installation Instructions*.
11. For the curved wall (panel 1) take the longest piece of molding and put one end into the corner of panels 3 and 4. Flex the molding around the panel curved panel.
12. Mark where the curved molding meets the molding on panel 9 and cut it to length.
13. Using finishing nails, tack it into place.



positioning curved cove molding



flexing the cove molding



marking cove molding